



Big Water Toy #9000

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Water play is more fun than ever with this versatile toy that provides a wonderful tactile experience. *Size 5"H x 12.5"W x 19"L. Requires Capability Switch and 4 D Batteries. Weight: 4.5 lbs.*

Operation:

1. To install the batteries remove the Phillips head screw from the battery compartment. Next remove the battery cover. Install 4 D cell batteries into the compartment. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use Heavy Duty, Super Duty or rechargeable batteries, because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together. Please note to follow proper (+) & (-) battery polarity. Replace cover and screw.
2. Fill the water tray up to the Water Line indicated where the top water hose comes out inside the tray.
3. Plug your external capability switch (Not Included) into the female 1/8" cord jack connected to the battery housing. Make sure your switch is plugged in all the way. There should be no gaps. Activating your switch will start the water flowing. Once the switch is released, the water will stop. For continuous watering you can use our Jumbo ON/ OFF switch #7805 or any switch with our # 605 Switch Modifier.
4. The top water hose should be feed into the top hole of the included ferries wheel toy. See photo on back of this guide.

Please Note: Do not leave the Big Water Toy outside for any prolong period of time. This is not a weatherproof toy. Extreme heat or sun exposure can damage the electronics of the toy. Bring indoors when finished playing.

Troubleshooting:

Problem: Big Water Toy does not turn on when switch is depressed.

Action #1: Make sure that you press all connections firmly together. Any gaps may interrupt electrical connection.

Action #2: Make sure batteries are fresh.

Action #3: Try a different switch with the Big Water Toy to rule it out as the source of the problem.

Problem: The water does not flow.

Action #1: Check the clear tubing that nothing is stuck inside blocking water flow.

Action #2: Check to make sure nothing is pinching the water outlet hose.

Action #3: Check and or replace the four D cell batteries with fresh batteries.

Care of Unit:

Empty the water from Big Water Toy when you are finished using it.

The Big Water Toy can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit in any fluids, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.