
Adapted Garden Sprayer #9083

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Join gardening time!

Our adapted garden spray easily attaches to any wheelchair and has a flexible gooseneck-mounted (clamp included) spraying wand, allowing the user to help maintain a healthy garden. Sprayer wand can be adjusted in length from 12 to 24 inches. Spray nozzle is also adjustable so you can adjust the spray from a very fine mist to a long range stream. Also included are a Fan nozzle and Shower nozzle included. Holds up to 1.35 gallons of water. Size 9.5"H x 11"W x 5"D. Requires Capability Switch and 5 volt AC wall charger used for smart phones (Not Included). Powered by a 2400mAh rechargeable lithium battery. USB-C to USB-A charging cord included. Weight: 2.53 lbs.

Operation:

1. To charge the Garden Sprayer use the included USB-C charging cable with any 5 Volt smart phone AC wall charger. The red light is ON while charging and will go OFF when fully charged. A full charge takes approximately 3 hours. Run time on a full charge is between 2 to 3 hours. If left for prolonged periods of non-use, it is recommended to charge every 2 months to prolong battery life.
2. To fill the tank, remove the screw on cap and fill the tank with water from the tap. Replace cap.
3. Plug your external capability switch (not Included) into the female 1/8" jack located on the spray wand. Make sure the ON/OFF switch is set to the appropriate position e.g. OFF for use with an external switch. Activating your switch will start the water flowing. A second activation of your switch will stop the water flow. For continuous watering without an external switch, turn the built in ON/OFF switch to ON.
4. The sprayer attaches to the included flexible gooseneck mount and clamp. You can adjust the spray from a fine mist to a long range stream. The sprayer wand is telescopically adjustable from 12 to 24 inches. To adjust the length of the spray wand you must pull on the first section of the wand out, the wand will extend from its handle.

Please see original product user's guide (included) for complete details and features.

Troubleshooting:

Problem: Garden Sprayer does not turn on when switch is depressed.

Action #1: Make sure that you press all connections firmly together. Any gaps may interrupt electrical connection. And the built in ON/OFF Switch is set to OFF.

Action #2: Make sure the unit is fully charged. (Check charge meter on spray handle).

Action #3: Try a different switch with the sprayer to rule it out as the source of the problem.

Problem: The water does not flow.

Action #1: Check your water flow nozzle adjustment.

Action #2: Check to make sure nothing is blocking or pinching the water outlet hose.

Care of Unit:

Empty the water from The Garden Sprayer when you are finished using it.

The Garden Sprayer can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit in any fluids, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.