

---

---

## Shimmering Dome #9220

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

### ***Beautiful color patterns!***

Activate the black frame of the dome and hear music while watching the beautiful multi-colored light show (music plays for 5 seconds). The color patterns are mesmerizing. Great for increasing visual attention and color recognition. Has on/off switch with volume control and adjustable vibration. Device has an external jack for your capability switch if needed. Size: 9"L x 5"H x 7½"W. Requires 4 C Batteries. Weight: 1½ lbs.

#### **Operation:**

1. Shimmering Dome requires 4 C size batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the underside of the unit. To install the batteries, turn the unit over. Next remove the small Phillips head screws from the black battery cases and slide the covers off.
3. Install the batteries, following proper (+) & (-) battery polarity. Replace covers and screws. Turn the On/Off/Volume knob and set to an audible level. Vibration can also be set to On/Off using the toggle switch.
4. When you activate the black frame or dome Shimmering Dome will display a beautiful multi-colored light show while music plays. The color patterns are mesmerizing. The music and lights will play for approximately 5 seconds, regardless if the black frame or dome is touched during this time. Once the Shimmering Dome stops playing another activation will repeat the music and lights.
5. There is also an external switch input jack on the back of the unit for those users who need other activation options, such as a Sip and Puff or head switch to activate the device.

#### **Troubleshooting:**

**Problem:** The units music or lights fails to operate, or operates incorrectly.

**Action:** Check all batteries making sure they are installed with proper (+) & (-) battery polarity.

**Action:** Check that all batteries are fresh, if not replace with new batteries.

**Problem:** top black frame seems to be stuck / jammed.

**Action:** visually inspect the frame area underneath, making sure there is nothing obstructing or blocking the plate from moving freely.

#### **Care of Unit:**

Shimmering Dome can be wiped clean with any household multi-purpose cleaner or disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner. Use caution not to get cleaning fluid or any liquid under the plate areas.

**Do not submerge** the unit, as it will damage the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.