

Troubleshooting:

Problem: Music does not activate or becomes distorted and/or the lights become dull or do not illuminate.

Action: Replace batteries.

Problem: Spinners do not turn or only spin slowly, but lights are still bright and music operates correctly.

Action: Replace the AA batteries.

Problem: Lights are dull, or do not illuminate and music does not activate or is distorted, but the spinners still spin well.

Action: Replace the AA batteries.



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com

Glitter Pin w/Lights, Music & Vibration #1695

USER'S GUIDE



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Sensory stimulation!

This Glitter Pin is divided into three sections and can be easily mounted onto a mirrored base (#1650) (optional and sold separately). Lights up as the beads tumble, has colored lights in each section and plays music as it gently vibrates. Great for visual, auditory and physical stimulation. (Does not require a capability switch). Size: 11¼"L x 3½"W. Weight: 1¼ lbs.

When the **Glitter Pin with Lights, Vibration and Music** (Catalogue #1695) is rolled, a potpourri of colorful beads tumble over a mirror-like background. Each of the three sections has a differently colored single light, that shine brightly as music plays and the toy gently vibrates.

Operation:

1. The Glitter Pin with Lights, Vibration and Music (#1695) requires two AA batteries. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery case is located under the end cap attached with screws (not rivets), which is indicated by the arrow on the cylinder. To access the battery case, remove the three screws by turning them counterclockwise. Remove the end cap.
3. For safety and performance, the AA battery case cover is secured with one small screw. Remove this screw by turning it counter-clockwise. Install new batteries, being careful to observe battery polarity.
4. Replace the battery case cover and secure with the screw.
Do not over tighten.

Note: The two AA battery cases are attached to each other, due to space restriction. For safety and performance, the AA batteries are secured with Velcro straps. To access the AA battery case, **carefully** separate the Velcro straps. After installing AA batteries, be sure to wrap the Velcro straps securely over the batteries.

5. Reattach the end cap with the three large screws.
Screw them down evenly, a little at a time, working around the end cap. Do not over tighten.
6. To mount the Musical Glitter Pins on the optional Glitter Pin Base (#1650), slip the center hole of either end cap of the Musical Glitter Pin over the **stationary** silver axle pin (i.e., the axle pin that is not retractable). Gently pull back the retractable axle pin and align it with the center of the other end of the Musical Glitter Pin. Release the retractable axle pin.
7. To remove the unit from the base, gently pull back the retractable axle pin and lift up that side of the Musical Rolling Pin. Slip the other end of the unit off the stationary axle pin.

Troubleshooting:

Problem: Music does not activate or becomes distorted and/or the lights become dull or do not illuminate.

Action: Replace batteries.

Problem: Spinners do not turn or only spin slowly, but lights are still bright and music operates correctly.

Action: Replace the AA batteries.

Problem: Lights are dull, or do not illuminate and music does not activate or is distorted, but the spinners still spin well.

Action: Replace the AA batteries.