



---

## Activity Gym #2319

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### Let discovery begin!

Our Activity Gym has five different activities to explore as well as flashing lights, music and a mirror to add interest. Pull the center toy and upbeat music plays. All pull toys are interchangeable for variety. Additional set of five toys available separately. Encourages grasping, reaching, eye hand coordination and develops gross motor skills and tactile senses. Easy to assemble and take apart. *Size: 28"W x 30"H x 3½"D. Requires 2 AA Batteries. Weight: 8½ lbs.*

#### Assembly & Operation:

1. Activity Gym requires 2 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Gently turn the top unit over to reveal the black battery compartment. Carefully remove the small screw from the compartment cover using a Phillips head screwdriver, and slide the cover off. Observing proper (+) & (-) battery polarity, install 2 AA size batteries into the holder. Replace the battery compartment cover and screw.



3. Under the base you will also find the mirror, there is a peel off protective film covering the mirror to prevent scratches during shipping. You can now remove the film.
4. The next step is to install the 4 legs. All 4 legs are press fit into place. See photos on next page.
5. **Disassembly:**  
If you need to disassemble the Activity Gym for transport or storage you can just pull the legs out. See photos on next page.



#### Troubleshooting:

If the unit fails to operate or operates incorrectly, the following steps should be performed:

**Action #1:** Check battery for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand). Do not use rechargeable or heavy duty batteries.

#### Care of Unit:

Activity Gym can be wiped clean with any mild household multi-purpose cleaner and disinfectant.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.