

Mounting Options:

Each Light Panel has 4 mounting holes for wall mounting. **Please Note:** Mounting hardware is not included. You can use standard wall anchoring hardware found at hardware stores and Home Improvement Centers. Please consult one of their hardware associates for the proper mounting hardware based on your wall construction. In addition we also offer our Track System when mounting 3 or more Light Panels item No. 3116.



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com

Touch Light Panels #3113B, G, L, O & P

USER'S GUIDE



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Six fantastic textured wall mounts!

These six Touch Light Panels are fantastic for your classroom or sensory space. They look terrific on the wall. Each panel has wonderful texture, is brightly lit and has adjustable vibration. Press the lime panel to hear sounds of nature. Touch any of the other panels to hear a calming song. Touch the panels a second time to hear a new song. Panels have six songs which play for approximately 20 seconds each. All of the panels provide the user with a wonderful tactile, auditory and visual experience. Panel size: 13½"L x 3½"H x 15¼"W. Requires 4 C Batteries each. Weight: 4¼ lbs. each.

1. Touch Light Panels requires 4 C batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located under the magnetically held compartment on the top of the panel. To access the compartments lift up the access door and then remove the Phillips Head screws from each battery compartment cover. Install the C batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together. (See Photo).



2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level of the music. There is also an adjustable Vibration knob for controlling the vibration feature's intensity. This will add vibration when the Light Panel is activated. The Light Panel can be used with or without the vibration function. **Please Note:** Each song must play completely before pressing the panel again to play the next song. Pressing the panel while a song plays will not stop or change the song.

Troubleshooting:

Problem: Light Panel's lights, music, sounds or vibration do not work when activated.

Action #1: Make sure the ON/OFF/VOLUME knob is turned.

Action #2: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: Touch Light Panels do not play music or sounds.

Action #1: Make sure the ON/OFF/VOLUME knob is turned ON and set at an audible level.

Action #2: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: Touch Light Panels do not work at all.

Action: Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

Care of the Unit:

The Touch Light Panels can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.