

**Do not use** abrasive cleaners, as they will scratch the surface of the unit.

**Do not submerge** the unit, as it will damage the electrical components.

**Mounting Options:**

Each Panel has 4 mounting holes for wall mounting. **Please Note:** Mounting hardware is not included. You can use standard wall anchoring hardware found at hardware stores and Home Improvement Centers. Please consult one of their hardware associates for the proper mounting hardware based on your wall construction. In addition we also offer our Track System when mounting 3 or more Light Panels item No. 3116.



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---

---

## Soothing Lights & Sounds Wall Panel #3608

---

---

### USER'S GUIDE



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Muted lights in many colors swirl and gentle music plays when the dome is pressed. Sustained pressure is needed to keep the show going. Size: 13½"L x 15"W x 7½"H. Requires 4 C Batteries. Weight: 4½ lbs.

1. Soothing Light & Sound Panel requires 4 C batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartment is located on the bottom of the unit. To access the squeeze the two black tabs inward to release the spring loaded battery tray. Install the C batteries into the tray. When installing new batteries, always be careful to observe battery polarity. Replace battery tray by sliding it back with the two tabs squeezed, then push the tray until it clicks into place. Never mix old and new batteries together or different brands or types together. (See Photos).



2. Turn the ON/OFF/VOLUME knob located on the top of the unit, clockwise, you will hear an audible click. Adjust to knob for desired volume level.
3. Muted lights in many colors swirl and gentle music plays when the dome is pressed. Sustained pressure is needed to keep the show going.

### **Troubleshooting:**

**Problem:** Soothing Light & Sound Panel's lights or music do not work when activated.

**Action #1:** Make sure the ON/OFF/VOLUME knob is turned.

**Action #2:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Soothing Light & Sound Panel does not light up or play music.

**Action #1:** Make sure the ON/OFF/VOLUME knob is turned ON and set at an audible level.

**Action #2:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Soothing Light & Sound Panel does not work at all.

**Action:** Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

### **Care of the Unit:**

The Soothing Light & Sound Panel can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.