



Fill here with water until water level meets white base
(See arrow level indicator in photo above).

enabling
devices

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com

Aqua Dome #1691

USER'S GUIDE

enabling
devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

A soft rainbow of slowly changing lights glimmer through gently flowing water, while soothing music completes this multi-sensory experience of sight, sound and touch. The Aqua Dome is capability-switch adapted and can be used with or without music. Size: 14"L x 14"W x 7"H. Requires 6 C Batteries. Weight: 3 lbs.

Operation:

1. The Aqua Dome requires 6 C size batteries Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.

Operation:

1. To install the batteries, carefully turn the unit over to reveal the battery compartments. Next remove the screws from the covers and lift off. Next install 6 C cell batteries into the holder. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together. Please note to follow proper (+) & (-) battery polarity. Replace covers and screws.
2. Fill the Aqua Dome with water, until the base below the dome is just covered with water (See photo on back page). Do not fill passed this or the water will overflow. To use the Aqua Dome with an external switch first set the ON/OFF switch to OFF. There is also a switch to turn the Music ON or OFF. If you want music then set this to ON. If not set the Music switch to OFF.
3. Plug your external capability switch (Not Included) into the female 1/8" cord jack which runs out from under the base of the unit. Make sure to plug your switch in all the way. There should be no gaps. Activating your switch will start a soft rainbow of slowly changing lights glimmer through gently flowing water, while soothing music completes this multi-sensory experience of sight, sound and touch. Once the switch is released all will stop. For continuous play without an external switch, turn the built in ON/OFF switch to ON. Music can also be turned ON or OFF.

Troubleshooting:

Problem: Aqua Dome does not turn on when switch is depressed.

Action #1: Make sure that your switch is plugged in all the way. Any gaps will interrupt electrical connection.

Action #2: Make sure batteries are fresh.

Action #3: Try a different switch with Aqua Dome to rule it out as the source of the problem.

Problem: The water does not flow.

Action #1: Check and or replace the 6 C cell batteries with fresh batteries.

Action # 2: Make sure you have enough water in the base for the pump to run.

Action # 3: Turn unit OFF. Gently blow into the hole on top of the dome (you should hear a bubbling noise). Pump should now be primed and working properly.

Care of Unit:

Empty the water from The Aqua Dome when you are finished using it, and then wipe the inside with a paper towel or cloth, and let air dry.

Aqua Dome can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit in any fluids, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.