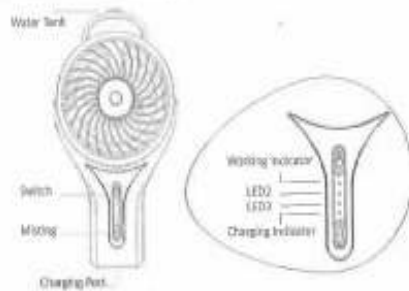

Misting Fan #2134

USER'S GUIDE

Structure Drawing



Note

1. Please use the enclosed bottle to add water and avoid overflow.
2. The working status indicator flashes while in low battery. The fan will automatic shut down to protect the device when the power exhausted.
3. Please do not put any foreign matter into the fan.
4. If the fan would not be used for a long time, please fully charge the battery and store it in a cool and dry place.
5. It is strictly PROHIBITED to use the battery at an ambient temperature over 140°F.
6. Please DO NOT extrude or disassemble the battery, which might lead to environmental pollution or explosion.

Specifications

Model	F30
Speed Mode	Low / Medium / High
Output Power (MAX)	3.5W
Battery Working Time (H)	2 - 5
Battery Specification	18650 Lithium (Capacity:2000mAh)
Water Capacity	20 ml
Mist Volume	30 ml / H
Charging Time (H)	About 4 - 5
Dimension (mm)	160*100*46
N.W.(g) (including battery)	About 130

Operating Instruction

1. **Switch:** Power on / Adjust the speed (low, medium, high) / Power off
2. **Misting:** Intermittent mist (LED 2 ON) / Continuous mist (LED 3 ON)
3. **Charging Indicator:** Red- charging
Green- fully charged
4. LED2 & LED3 will flicker once there is no water and the mist function will stop after 5 seconds.
5. LED2 & LED3 will flicker when the battery is low power, please charge the fan in time through the included USB cable.

enabling
devices

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com

enabling
devices

50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Our adapted Misting Fan provides a fine mist of water and a powerful fan at the touch of your switch. Fan has three speeds. Misting has two modes: continuous or intermittent. Two jacks allow you to activate the fan and mist separately using two of your switches. Three suction cups hold the fan in place. Comes with ¼-20 socket for mounting. Size: 5"L x 5"W x 8"H. Battery rechargeable with USB. Weight: ¾ lb.

Operation:

1. The Misting Fan has a non-removable rechargeable battery. Use the included USB charging cable with any 5 volt USB wall charger. Charging time is between 4 to 5 hours. The charging port is located on the bottom of the fan. Charging indicator, Red charging, Green fully charged.
2. Please use the included bottle for adding water to the fan. This will prevent leaking while refilling, as the fan is not water proof. We recommend using distilled water. The fan is filled by opening the fill cap on top of the fan. Fill with water and replace cap.
3. The Misting Fan can be used with or without switches. Plug your switch into the Fan's jacks. Make sure that the connection between your switch and the Fan is plugged in all the way. There should be no gaps. The Fan's top switch or your own switch controls the fan's speed (Low/Medium/High) and also turns it OFF. First activation is Low, second is Medium, third is High, fourth is OFF.
4. The second jack controls the Fan's misting function. First press of the built in button or your own switch, Intermittent (LED 2), Continuous (LED 3), third Misting Off. LED 2 & LED 3 will flicker once there is no more water in the tank and the mist function will stop after 5 seconds.
5. The Misting Fan comes with a removable Velcro attached base with suction cups for smooth surface use. The base also has a ¼ - 20 threaded socket on the bottom for attaching to most mounting arms. There is also a cutout for the charging port in the base to allow for charging with the base still attached.

Troubleshooting:

Problem: The Misting Fan does not work.

Action #1: Check that the fan is full charged. See charging in operation # 1. The fan's LED lights will flash when the battery charge is low. The fan will automatically shut down to protect the device when the power is exhausted.

Action #2: Make sure that the connection between the Fan and your switches are plugged in all the way. There should be *no* gaps. This is a common error and an easy fix.

Action #3: Try a different switch with your Fan to rule out the Misting Fan as the source of the problem.

Problem: Misting Fan does not mist.

Action: Check water tank is full. Wipe white center disk in the front of the fan with a damp cloth or wet paper towel to clean.

Care of Unit:

The Misting Fan can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a nontoxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.