
Textured Tunes Lights, Music & Vibration #4551

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

A fantastic sensory experience!

With stimulating textures and bold, vibrant colors, the interchangeable balls on our Textured Tunes are perfect for hands-on sensory exploration. We've added bead chains, multi-colored blinking lights, six upbeat tunes, and vibration. A Lazy Susan base provides easy access to all. Just swipe at the ball and the fun begins. Includes a set of 4 interchangeable balls. Size: 9¾"D x 6"H. Requires 4 AA and 2 C Batteries. Weight: 3¼ lbs.

Operation:

1. Textured Tunes requires 4 AA & C size batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the underside of the unit. To install the batteries, turn the unit over. You will need to first remove the Lazy Susan Base to access the 2 AA battery compartments. The Lazy Susan is held in place by two Phillips head screws. Rotate the metal base until the two screws are visible (see Fig. 1). Remove the screws and lift the Lazy Susan off. Next remove the small Phillips head screws from the black battery cases. Next slide the covers off.
3. Install the batteries, following proper (+) & (-) battery polarity. Replace covers and screws. Replace the Lazy Susan and secure with the screws. Mounted on a Lazy Susan base allows users the ability to spin the Textured Tunes for easy access to all of the textures. Turn the On/Off/Volume knob and set to an audible level. Vibration can also be set to On/Off using the toggle switch. There is also an On/Off switch for the lights. The On/Off slide switch for the lights is located on the front side of the C battery case.
4. The Textured Tunes plays six different melodies. When you push anywhere on one of the four interchangeable textured tops it will play one of six melodies while the LED lights flash and illuminate. The melodies will play in its entirety; once the music stops another activation of the textured top will play the next melody.

Changing the Textured Tops:

5. The textured tops are removable to give the user different textures and also for easy cleaning. With one hand hold down on the black base and lift up on the textured top's yellow disk. Please Note: Do not remove any of the tops by the top's themselves. Only remove them by pulling on their yellow disc plate. The textured tops are held in place by Velcro. To replace a top simply press in firmly down on the base to insure a strong hold.

Troubleshooting:

Problem: The units sounds melodies or lights fails to operate, or operates incorrectly.

Action: Check all batteries making sure they are installed with proper (+) & (-) battery polarity.

Action: Check that all batteries are fresh, if not replace with new batteries.

Problem: top plate seems to be stuck / jammed.

Action: visually inspect the switch plate area underneath, making sure there is nothing obstructing or blocking the plate from moving freely.

Care of Unit:

The Textured Tunes can be wiped clean with any household multi-purpose cleaner or disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner. Use caution not to get cleaning fluid or any liquid under the plate areas.

Do not submerge the unit, as it will damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.