

---

---

## Infinity Bead Chain #6472

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

The possibilities are endless with this unique multisensory toy that provides simultaneous tactile, visual and auditory stimulation. Touch the cool, smooth beads and activate a never-ending tunnel of multi-colored LED lights and the sounds of soothing classical music. Comes with four suction cups and on/off volume control. *Size: 17"L x 8"W x 13"H. Requires 4 C Batteries. Weight: 2½ lbs.*

1. The Infinity Bead Chain requires 4 C batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located on the back of the unit. Remove the Phillips Head screws from each battery compartment cover. Install the C batteries. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together. Replace covers and screws.
2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level of the music. **Please Note:** Each time you touch the cool, smooth beads and activate a never-ending tunnel of multi-colored LED lights and the sounds of soothing classical music. The lights and music will play for approximately 15 seconds after you stop touching or moving the beads.

### **Troubleshooting:**

**Problem:** The Infinity Bead Chain's lights do not work when activated.

**Action #1:** Make sure the ON/OFF/VOLUME knob is turned ON.

**Action #2:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** The Infinity Bead Chain does not play music.

**Action #1:** Make sure the ON/OFF/VOLUME knob is turned ON and set at an audible level.

**Action #2:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** The Infinity Bead Chain does not work at all.

**Action:** Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Action:** Clean the contact bar and the beads where they make contact with the metal bar that runs across the top with Isopropyl alcohol.

### **Care of the Unit:**

The Infinity Bead Chain can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use** abrasive cleaners, as they will scratch the surface of the unit.

**Do not submerge** the unit, as it will damage the electrical components.