
Spinning Symphony #8158

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Hear six different Mozart compositions when you press any of the brightly colored instrument switches that are easily accessible on a Lazy Susan. At the touch of a switch, add or subtract any of the five different instruments (harp, French horn, piano, flute or violin). Great for enhancing musical interest and developing listening skills. *Size: 9"D x 3"H. Requires 3 AA Batteries. Weight: 1½ lbs.*

Operation:

1. The Spinning Symphony requires 3AA size batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the underside of the unit. To install the batteries, turn the Spinning Symphony over. First remove the Velcro attached Lazy Susan. Next remove the small Phillips head screw from the black battery case and slide the cover off.
3. Install the AA batteries, following proper (+) & (-) battery polarity. Replace cover and screw. Mounted on a Lazy Susan base allows users the ability to spin the Spinning Symphony for easy access to all of the switches easily. Set the On/Off/Volume switch to Low or High Volume (switch 2 positions for the volume) to begin use. Turn Off when not in use to prevent battery drain.
4. Each colorful 2 ½" square plate has a picture of a musical instrument with the name written under it. Blue has a flute on it, the Orange a French horn, the Turquoise a harp, the Green a piano, the Yellow a violin and the Red has a picture of an orchestra.
5. The Spinning Symphony plays six different Mozart compositions. When you push one of the 5 individual instrument buttons it will

play that instrument while a flashing light illuminates that plate. If you hit it again it will stop playing.

6. You can add or subtract instruments of the symphony as one of the Mozart pieces is playing. If you hit the orchestra button it plays with a full ensemble sound with all the instruments lighting up. Every time you push the orchestra button it will play one of the 6 Mozart pieces. The Spinning Symphony is designed to be used on a table top or floor play.

Troubleshooting:

Problem: The units sounds melodies or lights fails to operate, or operates incorrectly.

Action: Check all batteries making sure they are installed with proper (+) & (-) battery polarity.

Action: Check that all batteries are fresh, if not replace with new batteries.

Problem: One plate seems to be stuck / jammed.

Action: visually inspect the switch plate area, making sure there is nothing obstructing or blocking the plate from moving freely.

Care of Unit:

The Spinning Symphony can be wiped clean with any household multi-purpose cleaner or disinfectant. We recommend Simple Green, which is a non-toxic biodegradable all-purpose cleaner. Use caution not to get cleaning fluid or any liquid under the plate areas.

Do not submerge the unit, as it will damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not jam the plates in with force, as this may damage that component.