

---

---

## Musical Snail #1114

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
customer\_support@enablingdevices.com



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### ***Great for auditory and color recognition!***

Make musical notes by pushing the colored buttons. Musical Snail helps to increase eye hand coordination and encourages listening skills. You can also learn to play songs by following the colors on the musical cards. It also has eight pre-recorded songs that you can play by pressing the auto play mode, then activating one of the buttons. Size: 16"L x 13"W x 5"H. Requires 2 AA Batteries. Weight: 2 lbs.

#### **Operation:**

1. Musical Snail requires 2 AA Batteries to operate. Turn the unit over; you will see a black battery compartment. Carefully remove the small screw from the battery compartment and slide the battery compartment cover off. Observing polarity, install 2 AA size batteries (Not included) into the holder. Alkaline batteries must only be used (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn the unit ON by setting the toy/ON/OFF switch and the Notes or Songs Mode Lock switch to ON. Now you can choose the Notes or Song mode by tapping the white snail face button one time then hit one of the colored buttons to see what mode you are in. If it's on the notes mode you will hear one tone. If you want the song mode tap the face button again. Once you have selected your mode turn the Notes or Songs Lock switch to the OFF position. This will keep your selection locked so the child can't accidentally hit the face button and change the mode
3. The musical snail comes with six 7" by 3 ½" tune cards. London Bridge, Row Row Your Boat, Twinkle Twinkle Little Star, Lullaby, Happy Birthday and Old Mc Donald.
4. Each song card has colored dots which correspond with the colored music buttons on the Musical Snail. Place one of the cards into the card holder slot and play the song. You can also make up your own colored music cards with other fun songs.

#### **Troubleshooting:**

**Problem:** Musical Snail does not function correctly.

**Action #1:** Make sure you have the ON/OFF switches set properly.

**Action #2:** Make sure there is no dirt or obstacles between the switch plates and the housing of the unit.

**Action #3:** Replace the batteries paying close attention to proper battery polarity.

**Action #4:** Disconnect the power by removing one of the batteries for 20 seconds in order to reset the unit. Re-install the batteries. If the unit does not work correctly, replace all the batteries paying careful attention to proper polarity.

#### **Care of Unit:**

If you will not be using Musical Snail for an extended amount of time, we recommend removing the batteries.

The Musical Snail can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners,** as they will scratch the surface of the unit.

**Do not submerge** the unit in water, as it will damage the electrical components Musical Snail is surface washable only.