

---

---

## **Band Jam #1115**

---

---

## **USER'S GUIDE**



### **For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
customer\_support@enablingdevices.com



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### ***Strike up the band!***

Five percussion instruments in one base! Activate any of the photo buttons to play a tambourine, triangle, drum, cymbal or maraca while multicolored LEDs light up the band! Band Jam is fun and exciting to play and allows the user to be independent. The instruments also provide great auditory stimulation. Size: 21"L x 17"W x 12"H. Requires 8 C Batteries. Weight: 5 lbs.

#### **Operation:**

1. Band Jam requires 8 C size batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types of batteries together.
2. The battery compartment is located under the unit's base. Carefully turn the unit over to reveal the battery compartment. Remove the small Phillip's Head screw from the cover, and then slide the cover to one side. Next install new batteries, being careful to observe proper + & - battery polarity. Slide cover closed and replace screw.
3. Next flip the ON/OFF toggle switch located below the battery compartment to ON.
4. Each yellow button has a picture of the instrument you are playing. Every time you press and hold down one of the yellow picture buttons, you will fire up that instrument and 10 multicolored LED's light up the entire stage. All the instruments can be played at the same time.
5. The instrument will continue to play as long as picture button continues to be depressed. Once you release the button, the instrument and LED lights will stop.

#### **Troubleshooting:**

**Problem:** Band Jam fails to operate.

**Action #1:** Be sure drumstick(s) are not stuck against the face of the drum or Tambourine pads. If they are, gently pull it away from the face of the pad and gently straighten spring.

**Action #2:** If the drumstick(s) are not stuck against the face of the pads, replace the batteries paying attention to proper + & - polarity.

**Problem:** The drum stick(s) spins, but either (a) does not strike the pads, or (b) does not strike the pads properly.

**Action:** Gently bend the drumstick(s) slightly at the spring to the appropriate position for optimal play.

**Problem:** One of the yellow buttons is stuck and the instrument it controls runs non stop when I turn the unit on.

**Action:** Make sure there is no dirt or obstacles between the yellow plate and the housing of the unit. Free any obstruction to allow the plate to move freely.

#### **Care of the Unit:**

The base and sides of the Band Jam can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**