
Captain Salty & Pepper (Pirate) #1132

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Hot! Hot! Hot!

Activate your capability switch and Captain Salty and Pepper will entertain you with a lively rendition of the song “Hot! Hot! Hot!” Captain sings and sways while Pepper adds fun comments about the song. Increase visual attention and develop music appreciation. Works with or without a switch. Size: 12"L x 8"W x 11"H. Requires 3 AA Batteries. Weight: 1¼ lbs.

Operation:

1. Captain Salty requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of the plush doll. Open the Velcro flap, then using a Phillips head screwdriver open and remove the batter cover. Next install 3 AA batteries paying close attention to proper battery polarity.
3. Connect Captain Salty to any external capability switch (not included) via the jack located at the end of his cord. Captain Salty is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps.
4. Actuate your external capability switch or squeeze Captain Salty's paw with the musical note symbol and he will entertain you with a lively rendition of the song “Hot! Hot! Hot!” Captain sings and sways while Pepper adds fun comments about the song. Increase visual attention and develop music appreciation.
5. Each switch activation or paw squeeze will start or stop Captain Salty. If you hit the switch or squeeze his paw again during play, the rhymes and music will start from the beginning.

Troubleshooting:

Problem: Captain Salty & Pepper does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Captain Salty & Pepper for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Captain Salty & Pepper is surface washable only.