
Pete & Tweet (Farmer) #1133

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

A wonderful day!

Pete the farmer sways and sings “Zip a dee doo dah” while Tweet the bluebird adds his own special bird songs to the tune. Just activate your capability switch to start the action. Great for teaching cause and effect and for developing visual attention. Works with or without a switch. Size: 6"L x 10"W x 12"H. Requires 3 AA Batteries. Weight: 1½ lbs.

Operation:

1. Pete the farmer requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of the plush doll. Open the Velcro flap, then using a Phillips head screwdriver open and remove the batter cover. Next install 3 AA batteries paying close attention to proper battery polarity.
3. Pete the farmer to any external capability switch (not included) via the jack located at the end of his cord. Pete the farmer is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps.
4. Actuate your external capability switch or squeeze Pete the farmer' s paw with the musical note symbol and he will sways and sings “Zip a dee doo dah” while Tweet the bluebird adds his own special bird songs to the tune. Great for teaching cause and effect and for developing visual attention.
5. Each switch activation or paw squeeze will start or stop Pete the farmer. If you hit the switch or squeeze his paw again during play, the rhymes and music will start from the beginning.

Troubleshooting:

Problem: Pete the farmer does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Pete the farmer for an extended amount of time, we recommend removing the batteries.

Do not submerge the unit in water, as it will damage the electrical components. Pete the farmer is surface washable only.