
Wrap Around Massager #1163A

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Flexible!

This vibrator is specially designed to provide vibro-tactile feedback for users with physical or sensory disabilities. The flexible tube can wrap around any part of your body. A convenient hook closure keeps the vibrator in place. It has two speeds and is available in a switch adapted or unadapted version. Size: 49"L x 1¾"W. Requires 2 C Batteries. Weight: 1¼ lbs.

Operation:

1. To install the two C batteries, you must unscrew each end cap on the tube. Next install one C battery in each end paying close attention to proper (+) and (-) polarity. When finished replace caps. **Important Note:** One end of the tube is marked with a white indicator line; the cap that matches this is marked with Off, Low and High settings. **Please Note:** Alkaline batteries must be used (e.g. Duracell or Energizer brand) Do not use rechargeable or heavy duty batteries as they will not work as well with this device. Never mix old and new batteries together.
2. **Please Note:** Model 1163A will only work through the use of an external switch.
3. To use with an external switch (No.1163A Only), first set the Off, Low and High setting to Low or High by turning the cap and lining it up with the indicator on the tube. Connect the Wrap Around Massager to any external capability switch (not included) via the cord jack located at the end of the cap. Wrap Around Massager is equipped with a 1/8" female mono jack for use with external capability switches that have a 1/8" mono plug. Make sure you have a tight connection. There should be no gaps.
4. Actuate your capability switch and Wrap Around Massager will gently vibrate. Once you release your external capability switch, Wrap Around Massager will turn off.

5. When you are finished using Wrap Around Massager turn the On/Off switch to Off. If Wrap Around Massager is not going to be used for a long period of time, e.g. one month or longer, we recommend removing the batteries during storage to prevent battery drain or leakage, which can cause damage to Wrap Around Massager.

Troubleshooting:

Problem: The Wrap Around Massager does not activate.

Action #1: Make sure that all batteries are installed following proper (+) and (-) polarity.

Action #2: Replace the batteries with new alkaline batteries (E.G Duracell or Energizer Brand).

Action #3: Do not use rechargeable or heavy duty batteries.

Care of Unit:

The Wrap Around Massager is surface washable only; it can be wiped clean with any mild household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.