

---

---

## Firefly Frog #1315

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

### *Twinkling!*

This cuddly friend is perfect for your sensory space or for bedtime. Activate your capability switch and fireflies will twinkle in the Frog's belly to create a magical glow. Firefly Frog also plays a choice of two soothing sounds: rain with crickets or a lullaby melody. Has a 45 minute sleep timer. Size: 7"L x 10"W x 10"H. Requires 3 AAA Batteries. Weight: 1 lb.

#### **Operation:**

1. Firefly Frog requires 3 AAA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located in the Velcro pocket on the side of Firefly Frog's belly. Open the flap then, using a Phillips head screwdriver open and remove the batter cover. Next install 3 AAA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw. Set the ON/OFF switch to OFF.
4. Connect Firefly Frog to any external capability switch (not included) via the jack located at the end of his cord. Firefly Frog is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to plug your switch all the way in. There should be no gaps.
5. Actuate your external capability switch, once and hear the sounds of light rain and crickets while fireflies will twinkle in the Frog's belly to create a magical glow. Press your switch a second time and a lullaby melody will play. The third time you activate your switch, only the lights will twinkle slowly. The fourth switch

activation turns Firefly Frog. He also works without a switch by squeezing Firefly Frog's front left hand, Firefly Frog has an auto shut off after 45 minutes. Volume is also adjustable by pressing Firefly Frog's right hand.

6. When finished using Firefly Frog turn his ON/OFF switch to OFF to prevent false activations and to prevent battery drain.

#### **Troubleshooting:**

**Problem:** Firefly Frog does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack is pushed in all the way. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

#### **Care of Unit:**

If you will not be using Firefly Frog for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Firefly Frog is surface washable only.