
Baby Einstein Take Along Tunes #1417

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

On-the-go music!

Activate your capability switch and listen to seven friendly versions of classical masterpieces by Mozart, Vivaldi, Chopin, and Rossini. Promotes music appreciation, auditory development and increases visual attention with its colorful lights. Has a handle for easy carrying and a volume switch. Size: 8"L x 6"W x 1½"H. Requires 2 AA Batteries. Weight: ½ lb.

Operation:

1. Take Along Tunes requires 2 AA Batteries to operate. Alkaline batteries must be used (e.g. Duracell or Energizer Brands). Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. Turn Take Along Tunes over to reveal the battery compartment. Remove the small screw with a Phillips Head screwdriver. Install 2 AA batteries paying close attention to proper battery polarity. Replace the battery compartment cover and screw.
3. Connect Take Along Tunes to any external capability switch (not included) via the jack located at the end of Take Along Tune's cord. Take Along Tunes is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure to make a tight connection. There should be no gaps.
4. Set the Off/Low/High Volume switch to the desired volume level.
5. Activating your switch will start the first song playing while colorful lights dance across the screen. The song will play in its entirety unless your switch is activated again. Each switch activation will advance to the next song.
6. When you are finished using Take Along Tunes, turn the OFF/Low/High Volume switch to Off. If you will not be using Take Along Tunes for an extended amount of time, we recommend removing the batteries.

Troubleshooting:

Problem: Take Along Tunes does not work.

Action #1: Replace the batteries paying close attention to proper (+) & (-) battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of the Unit:

The Take Along Tunes can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.