

---

---

## Peppa Pig #1455

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

### *She loves hugs!*

Activate your capability switch and Peppa oinks, giggles and says fun phrases like “I love hugs”. Can be used with and without a capability switch. Has on/off switch and comes with a stand for easy play. Great for teaching cause and effect, language development and auditory stimulation. Size: 9"L x 5"W x 11"H. Requires 3 AA Batteries. Weight: 1 lb.

#### **Operation:**

1. Peppa Pig requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located in the back of the plush doll. Open the Velcro flap, then using a Phillips head screwdriver open and remove the batter cover. Next install 3 AA batteries paying close attention to proper battery polarity. Replace battery cover and screw, next set the ON/OFF switch to ON.
3. We have included a Velcro attached removable stand to use with Peppa Pig so that you can sit her up when using a switch. There is Velcro on the back of Peppa Pig to hold her in place on the stand. There is also a cutout at the base of the stand to put her switch cable through.
4. Connect Peppa Pig to any external capability switch (not included) via the jack located at the end of her cord. Peppa Pig is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps.

5. Actuate your external capability switch or squeeze Peppa Pig's tummy and she will oinks, giggles and says fun phrases like “I love hugs”. When you are finished using Peppa Pig we recommend turning the ON/OFF switch to OFF to prevent false activation and battery drain.

#### **Troubleshooting:**

**Problem:** Peppa Pig does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

#### **Care of Unit:**

If you will not be using Peppa Pig for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Peppa Pig is surface washable only.