

---

---

## Flight of the Bumble Bee #1540

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
customer\_support@enablingdevices.com



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### ***Buzz, buzz, buzz!***

Activate the attached switch and the air from two fans will cause the bee's spinner wings to go round and round while the music from The Flight of the Bumble Bee plays. You will feel wind on your face, hands, arms and chest. Multi-colored lights on the wings of two bees in the background will twinkle brightly. Place your hands on the base and you will feel soft vibration. A great multi-sensory experience. Also works with an external capability switch. Size: 11½"L x 13"W x 13½"H. Requires 4 C and 4 AA Batteries. Weight: 3¾ lbs.

#### **Operation:**

1. The Flight of the Bumble Bee requires 4 C batteries and 4 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the bottom of the unit. To remove the battery compartment covers, unscrew the small Phillips Head screw on each of the black battery cases, and then slide the covers off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace covers and screws. Turn the On/Off/Volume knob clockwise to turn the unit On.
3. Push on the picture of the bumble bee on the red gumball switch and watch the Petit Bumble Bee yellow spinner wings go round and round.
4. When the Petite wings are spinning you will feel wind on your face, hands, arms and chest. You will also see the Bees leds light up while hearing the song Flight of the Bumble bee with the sound of bees mixed in the background. Place your hand on the picture of the lake with a **dock on it and a** man fishing and you will feel a soft vibration.

**Please Note:** The music plays for 30 Seconds without sustaining the switch.

#### **Troubleshooting:**

**Problem:** The Flight of the Bumble Bee does not work.

**Action #1:** Make sure the On/Off/Volume is turned ON and the Volume is set to an audible level.

**Action #2:** Check all batteries for proper (+) & (-) battery polarity.

**Action #3:** Check to make sure nothing is blocking or restricting the movement of the activation switch.

**Action #4:** Replace any dead or weak batteries with fresh new batteries. Never mix different brands or old and new batteries.

#### **Care of Unit:**

The Flight of the Bumble Bee can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

When finished playing with the Flight of the Bumble Bee turn the On/Off/Volume knob to Off to help prevent battery drain. For prolonged storage we recommend removing the batteries.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners,** as they will scratch the surface of the unit.