



Clamp Not included

Super Clamp Retro Kit #1541

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Retrofit your old gooseneck mount or switch!

Our Super Clamp Retro kit allows you to up-grade any of our older gooseneck mounting systems or gooseneck mounted switches or devices which had black plastic or aluminum clamps to our new Super Clamp. The Clamp is super simple to attach. Kit comes with black mounting strap and two Phillips head machine screws. Size: 1¾"L x ¾"H x 2"W.

1. To use the Retro Kit you will need to remove your old or broken clamp from your Gooseneck if you have not already done so. This will require a 3/16 Allen wrench or metric equivalent 4.5mm. Loosen the Allen bolt from the clamp and remove the clamp as shown in (Fig. 1).



Fig.1

2. Press the adapter on the Gooseneck just before the flare out and secure to your new Super Clamp item No.1559 (Sold Separately) with the included mounting screws as shown in (Fig. 2 & 3). Make sure you tighten the screws evenly for proper clamp attachment.



Fig. 2



Fig. 3

3. **Clamping Options:** Our mounting clamp is designed for mounting to tubular (wheelchair, bedrail, walker, etc.) or flat surfaces such as a table top or desk. For flat surface mounting use the included wedge insert shoe stored in front of the locking knob on the clamp (see Fig.4 & 5) Loosen locking knob slightly to remove wedge, tighten knob once wedge has been removed.



Fig.4



Fig. 5

3. Using the mounting clamp, attach the Clip Clamp to a Wheel Chair, Table or Desk. Tighten the clamp enough to hold the Clip Clamp securely, but do not over-Tighten the clamp.

Care of Unit:

Clip Clamp can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.