

---

---

## **B Woofer Guitar #1661**

---

---

### **USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### ***Endless musical experimentation!***

We've adapted this fun guitar and set it in a sturdy base. One switch plays 20 familiar songs and the other switch plays 9 "puppy" songs in three musical modes: acoustic, electric and hound dog. You can also play its eight built-in cord buttons, whammy bone bar and strings. Includes volume control, auto shut off and song book. B Woofer will provide hours of entertainment and exploration. Size: 11"L x 10½"W x 19½"H. Requires 3 AA Batteries. Weight: 3 lbs.

#### **Operation:**

1. B Woofer Guitar requires 3 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. To install the batteries turn B Woofer Guitar over and locate the small screw on the battery cover door. Using a Phillips head screwdriver open the compartment and install 3 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure with the screw. There are three ways to play B Woofer Guitar. One play its eight built-in cord buttons, whammy bone bar and strings. Second use the two big buttons we have added to the base. Third plug in any two external capability switches (not included) via the jacks on the back of the unit. B Woofer Guitar is equipped with a 1/8" female mono jacks for use with external capability switches that have a 1/8" mono plug. Make sure your switches are plugged in all the way. There should be no gaps.
4. One big button switch plays 20 familiar songs and the other switch plays 9 "puppy" songs in three musical modes: acoustic, electric and hound dog.

#### **Troubleshooting:**

**Problem:** B Woofer Guitar does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch and the jack are TIGHT. There should be NO gaps.

**Action #3:** Try your switches with another switch operated toy/device in an effort to rule out your switch as the source of the problem.

#### **Care of Unit:**

If you will not be using B Woofer Guitar for an extended amount of time, we recommend removing the batteries.

B Woofer Guitar can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**