

---

---

**Kitty Love #1663**

---

---

**USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

### *Sings L-O-V-E!*

Press your capability switch and this cute kitty sways from side to side while its tail wags. Its mouth moves too while it sings "L-O-V-E". Great for teaching cause and effect and for developing visual attention. Works with or without a capability switch. Size: 10"L x 7"W x 12"H. Requires 4 AA Batteries. Weight: 1¼ lbs.

#### **Operation:**

1. Kitty Love requires 3 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located under Kitty Love. Using a Phillips head screwdriver open and remove the batter cover. Next install 3 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure it with the screw. Set the ON/OFF switch to ON.
4. Connect Kitty Love to any external capability switch (not included) via the jack located at the end of her cord. Kitty Love is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have pushed the switch plug all the way in. There should be no gaps. Kitty Love can also be activated by squeezing her paw.

5. Actuate your external capability switch or squeeze Kitty Love's paw and she will dances and sings "Old MacDonald Had a Farm" Song plays for 40 seconds after switch activation but can be stopped at any time by pressing your switch again. Great for encouraging singing and developing language skills.

#### **Troubleshooting:**

**Problem:** Kitty Love does not function correctly.

**Action #1:** Replace the batteries paying close attention to proper battery polarity.

**Action #2:** Make sure that the connection between the external capability switch is pushed in all the way. There should be NO gaps.

**Action #3:** Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

#### **Care of Unit:**

If you will not be using Kitty Love for an extended amount of time, we recommend removing the batteries.

**Do not submerge** the unit in water, as it will damage the electrical components. Kitty Love is surface washable only.