Infinity Mirror #1683

USER'S GUIDE



For Technical Support:

Call our Technical Service Department Monday through Friday, 9 a.m. to 5 p.m. (EST) 1-800-832-8697

customer support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Fantastic illusion!

Our Infinity Mirror creates an optical illusion of a never ending tunnel of light when you press the built-in gumball switch. Multicolored LEDs flicker while music plays. Can also be activated with your own external capability switch. Fantastic visual effects are great for teaching cause and effect or for just enjoying the show. Size: $10\frac{1}{4}$ "L x 11"W x $11\frac{1}{2}$ "H. Requires 6 AA Batteries. Weight: $2\frac{1}{2}$ lbs.

PLEASE NOTE: Not to be used with seizure prone individuals.

- 1. Infinity Mirror requires 6 AA batteries (not included). Alkaline batteries must only be used (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located under the unit's base. Gently turn the unit over to reveal 3 black battery compartments. Carefully remove the small screw from each of the battery compartment covers using a Phillips head screwdriver, and then slide the battery compartment covers off. Install AA size batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
- 2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an auditable click. Adjust to knob for desired volume level.
- 3. Simply press on the built-in Gumball and Infinity Mirror creates an optical illusion of a never ending tunnel of light. Multicolored LEDs flicker while music plays. Release pressure from the switch and the Lights and Music will stop.
- 4. To use the Infinity Mirror with a switch, plug, any Capability switch into the switch jack located on the side of the Infinity Mirror's base. Make sure to plug your switch all the way in. There should be no gaps.

5. Activating your switch will do the same as the built-in Gumball switch.

Troubleshooting:

Problem: Infinity Mirror does not light up or play music.

Action #1: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Action #2: Make sure nothing is blocking or restricting the movement of the built in Gumball switch.

Problem: Infinity Mirror does not activate an external switch.

Action # 1: Make sure your switch is plugged in all the way. There should be no gaps.

Action # 2: Check your switch with another device you know is working.

Action # 3: If an adapter is being used, it must be Mono, stereo adapters will not work.

Care of the Unit:

Infinity Mirror's base can be wiped clean with any household multipurpose, non-abrasive cleaner and disinfectant.

PLEASE NOTE: The front screen should only be cleaned with mild soap and water on a damp rag or cloth. Other types of cleaners will cause damage to the screen if used.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.