
Musical Disco Ball #1684

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Funky and fun!

Activate the attached capability switch and a rainbow of multi-colored lights will spread rays of color around the room while six upbeat disco tunes play. The ball increases listening skills and visual attention. Can also be used with an external switch. Size: 8¾"L x 11½"W x 7½"H. Requires 4 AA and 2 C Batteries. Weight: 2 lbs.

Operation:

1. The Musical Disco Ball requires 4 AA & 2 C batteries to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Carefully turn over unit to reveal battery compartments. Remove the Phillips Head screws from the battery compartment covers. Next slide the battery compartment covers off and insert the batteries into the holders. Replace the covers and screws.
3. Set the ON/OFF/VOLUME switch to the desired VOLUME level. When you activate the built in gumball switch or your own external switch (see operation No.4) the Disco Ball with light up and start to spin slowly while one of six funky tunes plays. The Disco Ball and music will run for approximately 30 seconds and then stop. If you activate the Gumball switch or your own switch again, you will hear a different funky tune.
4. To use Musical Disco Ball with an external switch, plug any capability switch into the 1/8" jack. Make sure all connections between the Musical Disco Ball and your switch are tight. There should be no gaps. When your switch is activated it will work as described in operation 3.

Troubleshooting:

Problem: The Musical Disco Ball does not work.

Action #1: Make sure the On/Off/Volume knob is turned on and set to an auditable level.

Action #2: Check the batteries for proper installation, as noted in operation No. 2. Check batteries for freshness, if weak or dead replace with new batteries.

Action #3: Make sure the On/Off slide switch on the 2 C battery compartment is set to On. If set to Off the lights will not work.

Action #4: Make sure there is nothing obstructing the Gumball switch from moving freely.

Action #5: When using an external switch, make sure all connections between the Musical Disco Ball and your switch are tight. There should be no gaps.

Action #6: Check your switch with another switch activated device to rule the Musical Disco Ball out as the source of the problem.

Care of Unit:

The Musical Disco Ball can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.