



Photo No.1



Photo No.2

enabling
devices

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com

Northern Lights # 1686

USER'S GUIDE

enabling
devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Bright dancing lights!

Activate your capability switch to watch the colorful spinning top light show with its neon colors reflecting around the dome and listen to its upbeat music. Great for increasing visual attention and learning cause and effect skills. Size: 11½"L x 6½"H x 10"W. Requires Capability Switch and 4C and 2 CR2032 Batteries (included). Weight: 2½ lbs.

1. Northern Lights requires 2 CR 2032 (included) & 4 C batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The 2 C battery compartments are located under the unit's base. Gently turn the unit over to reveal battery compartments. Carefully remove the small screw from each of the battery compartment covers using a Phillips head screwdriver, and then slide the battery compartment covers off. Install batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. The 2 CR 2032 batteries for the light unit inside the dome have already been installed we have also included one spare set. To open the dome you will first need to release the two dome latches located one on each side off the dome. Turning them outward releases, inward latches them. See Photo 1. Once you have released the dome latches lift up on the dome arm. Looking inside the dome top you will see a round saucer shaped light unit with a push button On/Off switch. Push it in to turn the lights On then close the dome and secure with the two latches for use.
3. Changing CR 2032 Batteries instructions: At the top of the saucer you will see a metal washer, hold the washer with one hand and with your other hand turn the saucer counter-clockwise to unscrew it from the dome. Once removed using a small Philips screwdriver remove the 3 screws from the base and lift the cover off. The two CR 2032 batteries are placed in the center holder + side up which is the side with writing on it. Replace cover screws and screw the saucer back on again holding the washer and turning the saucer clockwise. Please Note: When putting the top back together, make sure you align the notch on the rim of the top, if you don't it will not go back together correctly and the top will spin with a wobble.
4. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level. Turn the On/Off switch for the lights located on the bottom of the light unit inside the dome. See Photo 2.

5. Plug, any capability switch into the switch jack located on the side of Northern Lights. Make sure the switch is plugged in all the way, with no gaps. Activate your capability switch to watch the colorful spinning top light show with its neon colors reflecting around the dome and listen to its upbeat music.
6. When you are finished using Northern Lights turn the On/Off switch for the light unit inside the dome to prevent battery drain. Also turn the ON/OFF/VOLUME knob OFF. For prolonged storage one month or more we recommend removing the batteries.

Troubleshooting:

Problem: Northern Lights, lights do not spin and does not play music.

Action # 1: Make sure the On/Off/Volume switch is turned On and set at an audible level.

Action #2: Check the C Batteries for strength and for proper battery polarity. Replace if weak or dead.

Problem: Northern Lights do not light up.

Action: Check the 2 CR 2032 Batteries for strength and for proper battery polarity. Replace if weak or dead. See Photo.2

Problem: Northern Lights Beads does not work at all.

Action #1: Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

Action # 2: Make sure all connections are tight.

Action # 3: Check your switch with another device you know is working.

Care of the Unit:

Northern Lights can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non-toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.