

---

---

## **Balls Go Round #1813**

---

---

### **USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

### Fantastic visuals for table top or wall mount!

Balls-go-round is a great toy for teaching cause and effect and increasing visual attention. Activate the attached yellow switch to turn on 4 upbeat tunes and the multi-colored blinking lights. It has adjustable volume and rotation speed, and a tactile pad. Ball colors may vary. Music and rotation run for approximately 10 seconds with each switch activation. Wall mounting hardware is included. Size: 18"H x 16"W x 10½"D. Requires 2 C and 6 AA Batteries. Weight: 6¼ lbs.

1. The Balls Go Round requires 6 AA batteries and 2 C batteries (not included). Alkaline batteries must only be used (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located on top back of the unit. Turn the unit around and remove the Phillips head screw from each of the black battery compartment covers using a Phillips head screwdriver. Next slide the battery compartment covers off. Install batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level.
3. There is also a SPEED control knob which controls how fast the balls go round, turning the knob clockwise increases the speed, counter clockwise decreases the speed.
4. Simply press on the round yellow switch plate and you will be rewarded with flashing multi colored lights, music and spinning balls. The Lights, Music and balls will run for approximately 10 seconds with each, switch activation. Each time you activate your switch the music will change.

### Wall Mounting:

The Balls Go Round comes with wall mounting hardware. To mount to a wall you must first remove the unit from its Velcro attached base, next turn the unit over there are 4 large Phillips head screws on the back panel. Remove the 4 screws and then place the wall mounting plate so that the 4 inner screw holes on the plate line up with the screw holes from the removed screws. Replace the screws to secure the mounting plat to the back of the unit. Next attach the two threaded posts to the screw holes at the bottom of each side of the unit. These posts are needed to keep the unit level when mounted to the wall. Use the include wall mounting screws and wall anchors to attach the unit to the wall.

### Troubleshooting:

**Problem:** Balls Go Round does not spin or light up.

**Action #1:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Balls Go Round does not play music or light up.

**Action:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Balls Go Round does not work at all.

**Action:** Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

### Care of the Unit:

Balls Go Round can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use** abrasive cleaners, as they will scratch the surface of the unit.

**Do not submerge** the unit, as it will damage the electrical components.