

---

---

## **Crawl Through Bead Chain Curtain #206**

---

---

### **USER'S GUIDE**



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

## Curtain rewards child with music!

This larger, crawl-through version of our popular somatosensory bead chain curtain has a built-in music box that automatically turns on as the child crawls through or manipulates the beads any other way.

We've now added an on/off switch. Great for encouraging movement.

*Size: 26"L x 27½"W x 26"H. Requires 2 AA Batteries. Weight: 9½ lbs.*

### DOWNLOAD your FREE copy of our Sensory Room Skills Chart

#### OPERATION:

1. The Crawl-Through Bead Chain requires two AA batteries. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery case is located on the underside of the unit. For safety and performance, the battery case cover is secured with one small screw. Remove this screw by turning it counterclockwise with a small Phillips head screwdriver, and slide the battery compartment cover off. Install 2 AA batteries, being careful to observe proper battery polarity.
3. Replace the battery compartment cover and secure with the screw. DO NOT OVER-TIGHTEN.
4. To set up the Crawl-Through Bead Chain, you will need to insert the four legs into the unit. Simply push each of the legs into one of the four tubes located under the unit. You should turn/twist the legs while pushing so as to ensure a secure fit.
5. Now you are ready! The beads will be set into motion and the music will activate as the child crawls through. Once the beads settle, the music will stop playing.

#### TROUBLESHOOTING:

**Problem:** Music does not activate or becomes distorted.

**Action:** Replace batteries and/or check the polarity of the batteries. Also, make sure that there is no residue built up on the metal bar that runs across the top of the bead chain. If it is dirty, clean it with a multipurpose household cleaner.

**Problem:** The music is constantly playing.

**Action:** Make sure that the unit is on a flat/even surface so that the beads are hanging straight down. Also, check to see if one or more of the bead chains has become wrapped around the metal bar near the top of the unit.

#### CARE OF UNIT:

The Crawl-Through Bead Chain can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as this will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

**\*NOTE:** If you would like to make the legs on your unit semi-permanent, we suggest that you wrap ordinary duct tape around the connection of the legs and the bead chain base. This will hold the unit together securely, yet will leave you the option of taking it apart later if desired.