

(Continued)

Action: Avoid these if possible, or choose another place to operate Billy Fun Wheels.

Problem: Loss of control.

Cause: Another radio control vehicle using the same frequency is operated near your vehicle. **Please Note: do not use Billy Fun Wheels near each other.** Out of sight or the control range of distance. (1 to 25 feet.)

Action: Move to another place where radio frequency interference from another device or vehicle is not present.

Care of Unit:

Billy Fun Wheels can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com

Billy Fun Wheels #2102

USER'S GUIDE



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Radio control monster truck!

Activate our specially designed controller and Billy Fun Wheels will go forward, backward, right and left with a roaring engine. Push the red button in the middle of the controller and you will hear the horn beep while mini headlights light up. A warning signal plays when the truck reverses. A great device for teaching directionality and increasing visual attention. Truck Size: 6"L x 5½"W x 5¼"H; Controller Size: 6"D x 2¾"H. Requires 4 AA and 3 AAA Batteries. Weight: 1¾ lbs.

Operation:

1. Billy requires 4 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. To install the batteries in the car, first turn the car over. Next remove the screw holding the battery compartment door and lift the cover off. Pull the battery holder out and install 4 AA batteries following proper (+) & (-) battery placement. Replace holder and battery cover. Turn the car's ON/OFF switch located on the bottom of the car to ON.
3. To install the battery for the big button remote control, turn the remote over and locate the small screw on the battery cover door. Using a Phillips head screwdriver open the compartment and install 3 AAA batteries paying close attention to proper battery polarity. Replace the battery compartment cover and secure with the screw. Set the On/Off toggle switch to On.
4. This big button controller allows the user to move Billy Fun Wheels forward, reverse, left or right. Push the red button in the middle of the controller and you will hear the horn beep while mini headlights light flash. Slight pressure on the control button in any of the four directions will drive Billy Fun Wheels in that direction. Once you release pressure on the button Billy Fun Wheels will stop.

5. When you are finished using Billy Fun Wheels turn the On/Off switch on the car and controller to Off, this will help conserve battery power. If Billy Fun Wheels is not going to be used for a long period of time, e.g. one month or longer, we recommend removing the batteries from the car and controller during storage to prevent battery drain or leakage, which can cause damage to Billy Fun Wheels and big button controller.
6. Billy Fun Wheels has an adjustable front wheel alignment adjustment knob located directly under the front wheels. This only needs adjustment if the car's front wheels are knocked out of alignment, which will cause the car to run to the left or right. You can also adjust the wheel alignment to the extreme left or right to make the car drive in a circle.

Troubleshooting:

Problem: Billy Fun Wheels is not running.

Action: Make sure batteries in the car and the controller are fresh and installed following proper (+) & (-) battery placement.

Problem: Billy Fun Wheels is running intermittently.

Action: Replace batteries in the big button remote control and car. Weak batteries will severely limit the normal transmitting range of your remote control.

Problem: Billy Fun Wheels does not react, or reacts poorly to operation by controller.

Cause: High-frequency interference occurred near to high-voltage lines, transformers and some types of building.

(Continued on back page)