
Dancing Taxi #2108

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Hail this cab!

Dancing Taxi has bump and go action when you activate your capability switch. Car sounds, upbeat music and bright lights on the wheels add to the fun. Size: 5½"L x 4"W x 3½"H. Requires 3 AA Batteries. Weight: ½ lb.

Operation:

1. Dancing Taxi requires 3 AA Batteries to operate. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and the unit may not perform as well. Never mix old and new batteries together or different brands or types together.
2. To install the batteries turn Dancing Taxi over and locate the small screw on the battery cover door. Using a Phillips head screwdriver open the compartment and install 3 AA batteries paying close attention to proper battery polarity.
3. Replace the battery compartment cover and secure with the screw. Connect to any external capability switch (not included) via the input jack on the back of the Dancing Taxi. Dancing Taxi is equipped with a 1/8" female mono jack for use with external capability switches that have a 1/8" mono plug. Make sure you have your switch plugged in all the way. There should be no gaps.
4. Actuate your capability switch and Dancing Taxi will spin about when it hits an object and go in another direction. Car sounds, upbeat music and bright lights on the wheels add to the fun. Dancing Taxi can also be used without the use of an external switch, by pressing any of the buttons on top of the Dancing Taxi.

Troubleshooting:

Problem: Dancing Taxi does not function correctly.

Action #1: Replace the batteries paying close attention to proper battery polarity.

Action #2: Make sure that the connection between the external capability switch and the jack are plugged in all the way. There should be NO gaps.

Action #3: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problem.

Care of Unit:

If you will not be using Dancing Taxi for an extended amount of time, we recommend removing the batteries.

Dancing Taxi can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non-toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.