



Photo 1



Photo 2

enabling
devices

For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com

R/C Thomas #2115

USER'S GUIDE

enabling
devices

50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

You're the engineer!

We've created a large two button remote control to make it easy to activate Thomas the Train. One button moves him forward, the other backwards. Train size: 5"L x 2¼"W x 3¼"H; Remote size: 6"L x 4½"W x 2"H. Train and Remote each require 3 AAA Batteries. Weight: 1 lb.

Operation:

1. Thomas requires 3 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. To install the batteries in the train turn the train over. Next remove the screw located down in-between the front wheels (see photos on back of guide) and lift the cover off. Install 3 AAA batteries following proper (+) & (-) battery placement. Replace cover and turn the train's ON/OFF switch located on the front underside of the train to ON.
3. To install the battery for the big button remote control, turn the remote over and locate the small screw on the battery cover door. Using a Phillips head screwdriver open the compartment and install 3 AAA batteries paying close attention to proper battery polarity. Replace the battery compartment cover and secure with the screw. Please Note: The remote has no ON/OFF switch. When storing the remote make sure nothing depresses the top two buttons to prevent battery drain.
4. This big button controller allows the user to move Thomas forward and a reverse circle. Slight pressure on the control button in either of the two directions will drive Thomas in that direction. Once you release pressure on the button Thomas will stop. R/C Thomas's uses IR (infrared not RF, radio frequency) to control him much like a TV remote works so he needs to be in

line of sight for the remote to control him properly. If not you will have no control of Thomas with the remote control.

5. When you are finished using Thomas turn the ON/OFF switch on Thomas to off, this will help conserve battery power. If Thomas is not going to be used for a long period of time, e.g. one month or longer, we recommend removing the batteries from Thomas and controller during storage to prevent battery drain or leakage, which can cause damage to Thomas and big button controller.

Troubleshooting:

Problem: Thomas is not running.

Action: Make sure batteries in Thomas and the big button controller are fresh and installed following proper (+) & (-) battery placement.

Problem: Thomas is running intermittently.

Action: Replace batteries in the big button remote control and Thomas. Weak batteries will severely limit the normal transmitting range of your remote control.

Care of Unit:

Thomas can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non-toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.