

---

---

## Star Projector Sound Machine #2130

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

[www.enablingdevices.com](http://www.enablingdevices.com)

## Soothing lights and sounds!

Our switch adapted projector and sound machine casts multicolored stars and shapes on the wall or ceiling. It also plays a variety of gentle nature sounds or you can play your own music by plugging in your iPod, iPhone, Android device, MP3 player, or any device with an earphone jack. Stereo cord is included. Projector and sound can work independently or together. Buttons control the light, volume and sound choice. Switch turns the machine on and off. Works with or without a switch. Soft lights and nature sounds are a great addition to your sensory room or bedroom. *Size: 3¾"D x 4"H. Requires 3 AA Batteries. Weight 1¼ lbs.*

### Operation:

1. Star Projector Sound Machine requires three AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn the unit to reveal the battery compartment. Carefully remove the battery compartment cover, and lift the cover off. Observing proper (+) & (-) battery polarity, install three AA size batteries into the holder. Replace the battery compartment cover and screw.
3. Set Star Projector Sound Machine to Off for external switch use by pressing the Sound/On/Off button and adjust your settings at this time. The Light button will set the Light On/Off, the Volume button has 3 different volume setting Low, Medium and High. The Select button lets you set one of 6 different sounds. **Please Note:** The Star Projector Sound Machine can work with or without the use of external switches.
4. Connect Star Projector Sound Machine to any external capability switch via the input jack located on the side of the unit. Actuating your switch once will start the selected settings; a second actuation will stop them. Starry Night is equipped with a 1/8" jack. If you need to use a 1/4" to 1/8" adapter use our No.1170 adapter. If purchased elsewhere, it must be a mono adapter, not stereo.

For a detailed description of all the Star Projector Sound Machine's features reference the original manufactures instructions.

**Please Note: Star Projector Sound Machine, light feature works best in a dark or very dimly lighted room.**

### Troubleshooting:

**Problem:** Star Projector Sound Machine does not light up and/or there is no sound.

**Action #1:** Check all your settings.

**Action #2:** Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

**Action #3:** Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

**Action #4:** Make sure that you have a tight connection between the external switches and the Starry Night. There should be no gaps.

**Action #5:** Try your external capability switches with another toy/device to rule out the switches as the source of the problem.

### Care of the Unit:

The Star Projector Sound Machine can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use abrasive cleaners, as they will scratch the surface of the unit.**

**Do not submerge the unit, as it will damage the electrical components.**