
Mini Carillon #2201

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Play a song!

Our unique precision-tuned bells are a wonderful introduction to the world of music. With our six color-coded song cards, it's easy to play songs by pressing the matching color on the switch plates below the bells. Song cards include familiar nursery rhymes including Twinkle, Twinkle and Mary Had a Little Lamb. You can also play your own tunes or six additional pre-recorded songs including Old MacDonald and Row Your Boat. Provides hours of entertainment and encourages listening and matching skills. Size: 26"L x 14"W x 6"H. Requires 4 C & 4 AA Batteries. Weight: 6¼ lbs.

Operation:

1. Mini Carillon requires 4 AA & 4 C Batteries to operate. Turn the unit over; you will see a black battery compartments. Carefully remove the small screws from the battery compartments and slide the battery compartment covers off. Observing polarity, install 4 AA & 4 C size batteries (Not included) into the holders. Replace covers and screws. Alkaline batteries must be used (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Turn the unit ON by setting the ON/OFF switch to ON. Make sure the Mini Carillon is set on a level surface, if not the bells will not be hit properly by the internal strikers. This will affect the sound of the bells.
3. The Mini Carillon comes with six 10" by 7" tune cards. London Bridge, Oh! Susanna, Twinkle Twinkle Little Star, Jingle Bells, Mary Had A Little Lamb and Old Folks at Home. It also has six pre-set songs within the unit. By pressing the #1 & 8 button at the same time the Mini Carillon will play different songs for the user independently. Pre-set songs are: Old MacDonald, Mary Has A Little Lamb, Take Me Out To The Ballgame, Row Row Your Boat, This Old Man and You' re A Grand Old Flag.

4. Each song card has numbered and colored dots which correspond with the colored music buttons on the Mini Carillon. Place one of the cards into the card holder slot and play the song. You can also make up your own colored music cards with other fun songs.

Troubleshooting:

Problem: Mini Carillon does not function correctly.

Action #1: Make sure you have the ON/OFF switches set properly.

Action #2: Make sure there is no dirt or obstructions between the switch plates and the housing of the unit.

Action #3: Replace the batteries paying close attention to proper battery polarity.

Action #4: Disconnect the power by removing one of the batteries for 20 seconds in order to reset the unit. Re-install the batteries. If the unit does not work correctly, replace all the batteries paying careful attention to proper polarity.

Care of Unit:

If you will not be using Mini Carillon for an extended amount of time, we recommend removing the batteries.

The Mini Carillon can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit in water, as it will damage the electrical components Musical Snail is surface washable only.