
My First Music Player #2209

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Four instruments in one!

Play seven familiar songs with one to four instruments. Start the concert by pressing the orange switch to hear the piano, press the green switch and the clarinets play, the blue switch adds the xylophone to the song, and finally the red switch starts the drums. Play instruments separately or all at once for an exciting performance. Size: 10"W x 8½"H x 8"D. Requires 2 AA Batteries. Weight: 1¼ lbs.

Operation:

1. My First Music Player requires 2 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types of batteries together.
2. The battery compartment is located on the back of the My First Music Player. Carefully remove the small screw from the cover using a Phillips head screwdriver, and lift the cover off. Observing proper (+) & (-) battery polarity, install 2 AA size batteries into the holder. Replace the cover and screw.
3. Next turn the On/Off toggle switch to On. Start the concert by pressing the orange switch to hear the piano, press the green switch and the clarinets play, the blue switch adds the xylophone to the song, and finally the red switch starts the drums. Play instruments separately or all at once for an exciting performance. When finished using turn the On/Off switch to Off to prevent battery drain.

Troubleshooting:

Problem: My First Music Player does not work.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

Action #2: Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

Care of the Unit:

My First Music Player can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.