
Finding Dory Bubble Machine #2236

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



385 Warburton Avenue
Hastings-on-Hudson, NY 10706
Tel. 914.478.0960 / Fax 914.478.7030
www.enablingdevices.com

Nemo and Dory!

Have endless bubble fun with your favorite Finding Dory characters. Eight rotating wands blow hundreds of bubbles when you activate your capability switch. Includes 4 oz. bottle of bubbles. Size: 7"L x 6½"W x 9"H. Requires 4 AA Batteries. Weight: 1½ lbs.

Operation:

1. Finding Dory Bubble Blower requires 4 AA batteries (Not included) to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located under bubble blower's base. Carefully turn the bubble blower over to reveal the battery compartment cover. Using a Phillips head screwdriver unscrew the cover screw and install 4 AA batteries, paying close attention to proper (+) and (-) battery polarity.
3. Replace the battery compartment cover and secure with the screw. Connect to any external capability switch (not included) via the jack located at the back of the bubble blower's base. Finding Dory Bubble Blower is equipped with a 1/8" jack for use with external capability switches with a 1/8" plug. Make sure you have a tight connection. There should be no gaps.
4. Finding Dory Bubble Blower can be used with or without an external switch. The ON/OFF switch is located in the back of the base unit. When using an external capability switch, the ON/OFF switch needs to be set in the OFF position. Actuate your external capability switch and the bubbles will start to flow! Once you release your switch the bubbles will stop.
5. When finished playing with Finding Dory Bubble Blower turn OFF to prevent battery drain.

Troubleshooting:

Problem: Finding Dory Bubble Blower does not function correctly.

Action #1: Check that all the batteries are installed, following proper (+) & (-) polarity. Also check that all batteries are fresh.

Action #2: Replace the batteries paying close attention to proper (+) and (-) battery polarity.

Action # 3: Make sure you have enough Bubble solution in the dipping troth. The Bubble solution should cover the Bubble Dippers completely.

Action #4: Make sure that the connection between the external capability switch and the jack is TIGHT. There should be NO gaps.

Action #5: Try your switch with another switch operated toy/device in an effort to rule out your switch as the source of the problems.

Care of Unit:

If you will not be using Finding Dory Bubble Blower for an extended amount of time, we recommend removing the batteries.

Finding Dory Bubble Blower can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a nontoxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.