

## Sensational spinner!

A fantastic cause and effect teaching device. Increases visual attention, tactile awareness, color recognition and auditory development. Six specially textured pads reward the user with different sensory stimulation: vibration, three melodies, a popcorn ball popper and multicolored lights. The busy box spins on a Lazy Susan base. All pads respond to the slightest touch. Size: 12"D x 6½"H. Requires 6 AA Batteries. Weight: 4½ lbs.

### Operation:

1. The Textured Carousel Busy Box requires 6"AA" size batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartments are located on the underside of the unit. To install the batteries, turn the Carousel over and remove the small Phillips head screws from the black battery cases. Next slide the covers off.
3. Install the AA batteries, following proper (+) & (-) battery polarity. Replace covers and screws. Mounted on a Lazy Susan base allows users the ability to spin the Carousel for easy access to all of the sensory plates.
4. Press any one of the six colored plates to activate one of the following: vibration and popcorn balls, melody & lights, rainbow lights and popcorn balls, buzzer, lights & popcorn balls or rainbow lights & melody.
5. Each of the sensory stimuli will only remain activated as long as pressure is maintained on the corresponding colored plate. Once you release the plate the stimuli will stop.

### Troubleshooting:

**Problem:** The units sounds melodies or lights fails to operate, or operates incorrectly.

**Action:** Check all "AA" batteries making sure they are installed with proper (+) & (-) battery polarity.

**Action:** Check that all batteries are fresh, if not replace with new batteries.

**Problem:** One plate seems to be stuck / jammed.

**Action:** visually inspect the switch plate area, making sure there is nothing obstructing or blocking the plate from moving freely.

### Care of Unit:

The Carousel Busy Box can be wiped clean with any household multi-purpose cleaner or disinfectant. Use caution not to get cleaning fluid or any liquid under the plate areas.

**Do not submerge** the unit, as it will damage the electrical components.

**Do not use abrasive cleaners**, as they will scratch the surface of the unit.

**Do not jam** the plates in with force, as this may damage that component.

---

---

## Textured Carousel Busy Box #2241

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)