

Takes all punches!

When the gooshy pad is struck, various sound effects play at different levels while lights track upward, indicating the amount of force applied. When struck with full force the user is rewarded with a rainbow of lights, vibration, music, spinning glitter and sound effects providing tactile and visual stimulation. Activation pressure levels are adjustable. Size: 11"W x 14"D x 21"H. Requires 6 AA Batteries. Weight: 3½ lbs.

Operation:

1. The High Striker requires 6 AA batteries. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery compartments are located under the unit. Carefully turn the unit over. The battery case covers are secured with one small screw each. Remove the screws by turning them counterclockwise with a Phillips head screwdriver. Install AA batteries in each of the compartments, being careful to observe proper battery polarity.
3. Replace the battery case covers and secure with the screws. Do not over-tighten.
4. The ON/OFF/VOLUME and SENSITIVITY control knobs are located on the bottom of the unit. Turning the ON/OFF/VOL knob clockwise turns the unit on as well as controls the volume of the sound effects only (Music volume can not be adjusted). Turning the SENSITIVITY knob changes how much force is needed when the Gooshy pad is struck. **Please Note:** Sensitivity adjustment starts changing about midway on the knob rotation. Clockwise increases sensitivity, counterclockwise decreases sensitivity.

5. When gooshy pad is struck, various sound effects play at different levels while lights track upward, indicating the amount of force applied. When struck full force the child is rewarded with a rainbow of lights, vibration, music, spinning glitter and sound effects. If sensitivity is set to low, striking the gooshy pad will not give the user the rainbow of lights, vibration, music, spinning glitter at the top within the dome.

Troubleshooting:

Problem: There are no lights, music, sound effects or vibration.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection.

Action #2: Check all batteries for freshness, if weak or dead replace with new batteries.

Action #3: Make sure volume is set to an audible listening level.

Action #4: Make sure sensitivity is adjusted for the user's strength.

Care of Unit:

The High Striker can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as this could damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

High Striker #2242

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com