
Funtastic #2244

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Irresistible to touch!

Activate the brightly colored 5" squishy pads to see blinking multi-colored lights, hear musical tunes, feel vibration, and watch the glitter dome and items spin about. Each sensory activation plays separately from 7 to 18 seconds. The gooshy pad is a great tactile experience for all. The squishy fluid moves through the center and goes back and forth when you push or pound it, giving you great visual and tactile effects. Size: 7"H x 14"W x 14½"D. Requires 4 C Batteries. Weight: 3 lbs.

Operation:

1. Funtastic requires 4 C batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located under the unit. Carefully turn the unit over. Remove the battery cover screw with a small Phillips head screwdriver. Once the screw is removed, rotate the cover in either direction to gain access to the battery compartment as the cover is still attached by a hinge. Install the batteries, being careful to observe proper battery polarity. Replace cover and screw.
3. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust the VOLUME to the desired level. Turn the knob counterclockwise to turn OFF. **Please Note:** Volume adjustment only affects the little Miss Muffet nursery rhyme, other effects or musical songs do not have adjustable volume.

Important Notes:

If the Funtastic will not be used for a long period of time, e.g. one month or longer, we recommend removing the batteries from the unit during storage to prevent battery drain or leakage, which can cause damage to the unit.

Troubleshooting:

Problem: Funtastic does not work.

Action #1: Check all batteries for proper (+) & (-) battery polarity.

Action #2: Replace all batteries with fresh new batteries. Never mix different brands or old and new batteries.

Problem: Funtastic works intermittently or very slowly.

Action #1: Check all batteries for proper (+) & (-) battery polarity.

Action #2: Replace all batteries with fresh new batteries. Never mix different brands or old and new batteries.

Care of Unit:

Funtastic can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.