
Under The Dome #2249

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Four activities!

1. Turn this fun dome to reach each of four different activities: bouncing sports car with the sights and sounds of the city; multi-colored lights, mirrors and music; farm animals with barn background and Old MacDonald music; and flying multi-colored beads and mirror. Mirrors create a wonderful 3D effect. Just press a yellow switch to activate each section. Great for teaching cause and effect, developing auditory and visual attention, and for involving several children in cooperative play. Size: 13"D x 6"H. Requires 2 C and 4 AA Batteries. Weight: 5 lbs. **Please Note:** Cars and Farm animals will vary.

Operation:

2. Under the Dome requires 4 AA & C size batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
3. The battery compartments are located on the underside of the unit. To install the batteries, turn the unit over. Remove the small Phillips head screws from the black battery cases. Next slide the covers off. Install the batteries, following proper (+) & (-) battery polarity. Replace covers and screws. Turn the On/Off toggle switch to On.
4. Activate one switch and you see a bouncing sports car on pavement with pictures of Broadway in the background and at the same time you hear many city horns beeping and upbeat music.
5. Activate another switch to see 4 mirrors with multi-colored blinking lights with music in the background. The multi-colored lights are seen in all 4 mirrors which create a 3D effect.

6. Activate a 3rd switch to see farm animals on grass with a picture of a barn in the background and at the same time you hear Old McDonald music.
7. In the final section you will see Multi-colored rubber beads flying up in the dome. The beads are jumping around and seen in 4 mirrors which again gives it a 3D effect.

Troubleshooting:

Problem: The units sounds melodies or lights fails to operate, or operates incorrectly.

Action: Check all batteries making sure they are installed with proper (+) & (-) battery polarity.

Action: Check that all batteries are fresh, if not replace with new batteries.

Problem: one or more of the switches seems to be stuck / jammed.

Action: visually inspect the switch plate area underneath, making sure there is nothing obstructing or blocking the plate from moving freely.

Care of Unit:

Under the Dome can be wiped clean with any household multi-purpose cleaner or disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner. Use caution not to get cleaning fluid or any liquid under the plate areas.

Do not submerge the unit, as it will damage the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.