
My First Saxophone #2256

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Sixteen nursery rhymes!

Activate your capability switch and play one of sixteen nursery rhymes while colorful lights blink. Two modes allow you to use your switch to play full tunes or just note by note. Also works without a switch. Great musical experience for kids while teaching cause and effect. Size: 2½"L x 6½"W x 8"H. Requires 2 AA Batteries. Weight: ½ lb.

Operation:

1. My First Saxophone requires 2 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types of batteries together.
2. The battery compartment is located on the top of the Saxophone. Carefully remove the small screw from the cover using a Phillips head screwdriver, and lift the cover off. Observing proper (+) & (-) battery polarity, install 2 AA size batteries into the holder. Replace the cover and screw. Next slide the mode switch to play the whole song or note by note.
3. Press any of the Saxophone buttons keys to hear one of sixteen nursery rhymes while colorful lights blink. Or hear note by note. Response for the Saxophone buttons depends on the activation mode selected.

External Switch Use:

4. You can connect any external capability switch via the cord jack. Make sure your switch is plugged in all the way. There should be no gaps.
5. **Please Note:** The switch adaption controls the same functions as the Saxophone buttons'.

Troubleshooting:

Problem: The Saxophone does not work.

Action #1: Rotate (spin) the batteries within the battery compartment to ensure a good connection. Check that all batteries are installed properly.

Action #2: Check all batteries for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand).

Switch Use:

Action #1: Make sure your switch is plugged in all the way. There should be no gaps.

Action #2: Try your switch with another device you know is working to rule out your switch as the source of the problem.

Care of the Unit:

The Saxophone can be wiped clean with any mild household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.