
Lighted Fan Wall Panel #2261W

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

The Lighted Fan Wall panel provides a gentle breeze, blinking multi-colored lights when you press the clear dome. This wall panel can be used with our Track System (#3116) or mounted directly on a wall. Size: 15" W x 13 ½ "L x 6 ½ "H. Requires 4 C Batteries. Weight: 4½ lbs.

1. Lighted Fan Wall Panel requires 4 C batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located under the spring loaded compartment on the top of the panel. To access the compartments lift up the access door and then remove the Phillips Head screws from each battery compartment cover. Install the C batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together.
2. Turn the ON/OFF power switch on each of the Battery compartments to ON. Turn these OFF when finished using and or storage to prevent false activation and battery drain.
3. Just press the big clear dome and feel a gentle breeze, watch blinking multi-colored lights. Once you release pressure on the clear dome all will stop.

Mounting Options:

Each Panel has 4 mounting holes for wall mounting. **Please Note:** Mounting hardware is not included. You can use standard wall anchoring hardware found at hardware stores and Home Improvement Centers. Please consult one of their hardware associates for the proper mounting hardware based on your wall construction. In addition we also offer our Track System when mounting 3 or more Light Panels item No. 3116.

Troubleshooting:

Problem: Lighted Fan Wall panel lights or fan do not work when activated.

Action #1: Make sure the ON/OFF power switch are turned ON.

Action #2: Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

Care of the Unit:

The Lighted Fan Wall Panel can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.