

**Do not use** abrasive cleaners, as they will scratch the surface of the unit.

**Do not submerge** the unit, as it will damage the electrical components.

**Mounting Options:**

Each Panel has 4 mounting holes for wall mounting. **Please Note:** Mounting hardware is not included. You can use standard wall anchoring hardware found at hardware stores and Home Improvement Centers. Please consult one of their hardware associates for the proper mounting hardware based on your wall construction. In addition we also offer our Track System when mounting 3 or more Light Panels item No. 3116.



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---

---

## **Musical Fireworks Wall Panel #2262W**

---

---

### **USER'S GUIDE**



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

The Musical Fireworks panel has flashing lights, the sounds of fireworks and an appropriate celebration tune. Panel comes with an on/off adjustable volume and vibration control. This wall panel can be used with our Track System (#3116) or mounted directly on a wall. Size: 15" W x 13 ½ "L x 6 ½ "H. Requires 4 C Batteries. Weight: 4½ lbs.

1. Musical Fireworks Panel requires 4 C batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located under the magnetically held compartment on the top of the panel. To access the compartments lift up the access door and then remove the Phillips Head screws from each battery compartment cover. Install the C batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together. (See Photo).



2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level.
3. Just press the big frosted dome to experience flashing lights, the sounds of fireworks and an appropriate celebration tune. Each press of the dome will play all the above for as long as the dome is pressed. Once you stop pressing the dome everything will stop. Pressing the dome again will start everything over.

### Troubleshooting:

**Problem:** Musical Fireworks Panel's lights or music do not work when activated.

**Action #1:** Make sure the ON/OFF/VOLUME knob is turned.

**Action #2:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Musical Fireworks Panel does not light up or play music.

**Action #1:** Make sure the ON/OFF/VOLUME knob is turned ON and set at an audible level.

**Action #2:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** Musical Fireworks Panel does not work at all.

**Action:** Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

### Care of the Unit:

The Musical Fireworks Panel can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.