

## Mounting Options:

The Ocean Gel Wall Panel has 4 mounting holes for wall mounting. **Please Note:** Mounting hardware is not included. You can use standard wall anchoring hardware found at hardware stores and Home Improvement Centers. Please consult one of their hardware associates for the proper mounting hardware based on your wall construction. In addition we also offer our Track System when mounting 3 or more Panels item No. 3116.



### For Technical Support:

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
[customer\\_support@enablingdevices.com](mailto:customer_support@enablingdevices.com)

---

---

## Ocean Gel Wall Panel #2267

---

---

## USER'S GUIDE



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

Motion sensor panel allows you to move your hand in front to light it up and play ocean and dolphin sounds. Press the gel pad and feel the soft yet squishy textures while moving the fish around. On/off vibration. Some low room light required. *Size: 13"L x 15"W x 3¾"H. Requires 4 C Batteries. Weight: 6 lbs.*

1. The Ocean Gel Wall Panel requires 4 C batteries (not included). Use Alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. The battery compartments are located under the magnetically held compartment on the top of the panel. To access the compartments lift up the access door and then remove the Phillips Head screws from each battery compartment cover. Install the C batteries into each holder. When installing new batteries, always be careful to observe battery polarity. Replace battery covers and screws. Never mix old and new batteries together or different brands or types together. (See Photo).



2. Turn the ON/OFF/VOLUME knob clockwise, you will hear an audible click. Adjust to knob for desired volume level of the music. There is also an ON/OFF toggle Vibration switch for controlling the vibration. This will add vibration when the Gel Panel is activated. The Ocean Gel Wall Panel can be used with or without the vibration function. **Please Note:** Each time you move your hand in front to light it up and play ocean and dolphin sounds.

Press the gel pad and feel the soft yet squishy textures while moving the fish around.

**Please Note:** Some low room light required for activation.

#### **Troubleshooting:**

**Problem:** The Gel Wall Panel's lights, music or vibration do not work when activated.

**Action #1:** Make sure the ON/OFF/VOLUME knob and the Vibration ON/OFF toggle switch is turned.

**Action #2:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** The Ocean Gel Wall Panel does not play music.

**Action #1:** Make sure the ON/OFF/VOLUME knob is turned ON and set at an audible level.

**Action #2:** Check the Batteries for strength and for proper battery polarity. Replace if weak or dead.

**Problem:** The Ocean Gel Wall Panel does not work at all.

**Action:** Check all Batteries for strength and for proper battery polarity. Replace if weak or dead.

#### **Care of the Unit:**

The Ocean Gel Wall Panel can be wiped clean with any household multi-purpose, non-abrasive cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not use** abrasive cleaners, as they will scratch the surface of the unit.

**Do not submerge** the unit, as it will damage the electrical components.