



Inserting Push-Pin



Removing Push-Pin



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)

1-800-832-8697

customer_support@enablingdevices.com

Activity Gym #2319

USER'S GUIDE



50 Broadway

Hawthorne, NY 10532

Tel. 914.747.3070 / Fax 914.747.3480

Toll Free 800.832.8697

www.enablingdevices.com

Let discovery begin!

Our Activity Gym has five different activities to explore as well as flashing lights, music and a mirror to add interest. Pull the center toy and upbeat music plays. All pull toys are interchangeable for variety. Additional set of five toys available separately. Encourages grasping, reaching, eye hand coordination and develops gross motor skills and tactile senses. Easy to assemble and take apart. *Size: 28"W x 30"H x 3½"D. Requires 2 AA Batteries. Weight: 8½ lbs.*

Assembly & Operation:

1. Activity Gym requires 2 AA batteries. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Gently turn the top unit over to reveal the black battery compartment. Carefully remove the small screw from the compartment cover using a Phillips head screwdriver, and slide the cover off. Observing proper (+) & (-) battery polarity, install 2 AA size batteries into the holder. Replace the battery compartment cover and screw. Set the **ON/OFF** switch to **ON**.
3. Under the base you will also find the mirror, there is a peel off protective film covering the mirror to prevent scratches during shipping. You can now remove the film.
4. The next step is to install the 4 legs with the included lock-in push pins. **Please Note:** each leg and each socket are numbered or color coded inside the tubes. Match up both leg and socket. There is also one hole drilled out in each leg and socket, line these up when pushing the legs in. Once you have the holes lined up you are ready to insert the locking push-pins. See photos below and on back page.



Match up numbers or color dots



Line up holes

Attention: If you want to be able to disassemble the legs from the Activity Gym do not push the locking button in on the push-pins. Doing so will make the pins non-removable.

Disassembly:

If you need to disassemble the Activity Gym for transport or storage you will need a small flat head screwdriver to remove each push-pin. See photos on back page of guide.

Troubleshooting:

If the unit fails to operate or operates incorrectly, the following steps should be performed:

Action #1: Check battery for freshness, if weak or dead replace with new batteries. Use an alkaline battery (E.G. Duracell or Energizer brand). Do not use rechargeable or heavy duty batteries.

Care of Unit:

Activity Gym can be wiped clean with any mild household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.