
Bright Red Switch #262

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Demands attention!

Push gently on the top of the switch and you will be rewarded with a bright red light and vibration. Plug this switch into your favorite adapted toy and it will activate when the switch is pressed. Size: 5"D x 2¼"H. Requires 2 AA Batteries. Weight: ¾ lb.

Operation:

1. The Bright Red Switch requires two AA size batteries. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply lower voltage and the unit may not perform as well.
2. The battery case is located under the unit. Install new batteries, being careful to **observe battery polarity**.
3. This switch can be connected to any external toy via the 1/8-inch jack located on the side of the unit. The Bright Red Switch comes with a 1/8- to 1/8-inch connector cord for activating toys or devices with 1/8-inch jacks. If you need to use an adapter, it must be a mono adapter, not stereo.

Troubleshooting:

Problem: The light and vibration do not activate, or the light becomes dull and the vibration weak.

Action: Replace the batteries.

Note: This unit will still operate properly as a switch even if the batteries need replacing.

Problem: The Bright Red Switch does not activate your toy/device.

Action #1: Make sure that the connection between the Bright Red Switch and your toy/device is tight. There should be **no** gaps. This is a common error and an easy fix.

Action #2: Try a different switch with your toy/device to rule out the toy/device as the source of the problem.

Action #3: Try a different adapter to rule this out as the source of the problem.

Care of Unit:

The Bright Red Switch can be wiped clean with any household multi-purpose cleaner and disinfectant.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.