
Motorized Squiggle Wiggle Pen #3028

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Stimulating & creative fun!

The original vibrating motorized pen in hot clear colors! Creates squiggle-writing loops with replaceable color points. Hours of creative fun. Also, when the vinyl cap covers the vibrating pen it becomes an oral stimulator. Ages 4 years and up. Size: 7"L x 1½"W. Requires 1 AA Battery. Weight: ¼ lb.

Operation:

1. The Motorized Squiggle Wiggle Pen requires one AA battery to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly.
2. To install the battery you must first unscrew the pen in a counterclockwise direction. Once you have the two halves of the pen separated, place the AA battery following proper (+) and (-) battery polarity into the lower half of the pen. Screw the pen back together.
3. There are five different color pen tips to choose from. To change pen color simply pull the pen cartridge out from the tip end. Insert another color cartridge. Turn the pen's On/Off switch to on and your ready to write.
4. Holding the pen straight up and down close to the point will make small squiggles, holding it further away from the point will make bigger squiggles.
5. This pen can also be used as a massager with the included soft vinyl tip. To use this pen as a massager, **FIRST REMOVE THE PEN TIP. (FAILING TO DO SO COULD POSE A CHOCKING HAZARD)** Next place the included vinyl cap over the end of the pen.

Important Notes:

This device should be used under adult supervision to prevent any choking hazards.

Troubleshooting:

Problem: The Motorized Squiggle Wiggle Pen does not activate.

Action #1: Make sure that the battery is installed following proper (+) and (-) polarity.

Action #2: Check to see if battery is fresh, if weak or dead replace.

Care of Unit:

The Motorized Squiggle Wiggle Pen can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.