

---

---

## Wind Chimes #3053

---

---

### USER'S GUIDE



**For Technical Support:**

Call our Technical Service Department  
Monday through Friday, 9 a.m. to 5 p.m. (EST)  
1-800-832-8697  
customer\_support@enablingdevices.com



50 Broadway  
Hawthorne, NY 10532  
Tel. 914.747.3070 / Fax 914.747.3480  
Toll Free 800.832.8697  
[www.enablingdevices.com](http://www.enablingdevices.com)

*Feel the ocean breeze!*

Just activate the attached sand switch and feel the ocean breeze off the beach, hear the beautiful sounds of the wind chimes, waves breaking over the shore line and the plaintive call of the loon, and watch the sun on the horizon light up the scene. A fantastic auditory and tactile experience. Has an external jack for your capability switch. Size: 16"H x 12"W x 10"D. Requires 6 C Batteries. Weight: 3¼ lbs.

**Operation:**

1. The Wind Chimes requires 6 C batteries to operate. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. Carefully turn over unit to reveal battery compartments. Remove the screws from the battery compartment covers. Next slide the battery compartment covers off and insert 6 "C" batteries into the holders. Alkaline batteries are recommended because they last longer. Do not use rechargeable batteries because they supply a lower voltage and unit may not perform as well. Be careful to check for Polarity, matching + to + marking and - to - marking in the battery holders. Replace covers and screws.
3. Turn the ON/OFF/Volume switch to ON by turning it clockwise. Set it to an audible volume level. Press the textured switch plate and you will be rewarded with the sounds of a Wind Chime and the soft breeze of the fan. Sounds of the ocean will play as well as light. Once you release pressure on the textured switch, the Chimes, light, sounds and fan will stop.
4. To use the Wind Chime with an external switch, plug your switch into the 1/8" female jack located on the side of the unit. When your switch is activated the Wind Chime will activate as before. Release your switch and the Wind Chime will stop.

**Please Note:**

**Do not block air flow from the fan.**

**Caution:**

**Keep loose hair away from fan to prevent tangling in fan blades.**

5. When you are finished using the Wind Chime turn the unit OFF. This will prevent battery drain. If the Wind Chime is not going to be used for a long period of time, e.g. one month or longer, we recommend removing the batteries during storage to prevent battery drain or leakage, which can cause damage to the unit.

**Troubleshooting:**

**Problem:** Wind Chime does not work.

**Action #1:** Check the batteries for proper installation, as noted in operation No. 2.

**Action #2:** Check batteries for freshness, if weak or dead replace with new batteries.

**Action #3:** Make sure there is nothing obstructing textured switch plate, fan blades or air flow to the fan.

**Action #4:** Check your switch with another device to rule the Wind Chime out as the source of the problem.

**Care of Unit:**

The Wind Chimes can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

**Do not submerge** the unit, as it will damage the contents and the electrical components.

**Do not use abrasive cleaners,** as they will scratch the surface of the unit.