
Learn & Dance Zoo Activity Ctr. #3105

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697

customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Play with the zoo animals!

This interactive zoo features two sets of four brightly colored buttons: one set on top of trees and another set of larger buttons placed low for easier access. These buttons introduce new animal friends through short, playful songs. Spin the roller to meet some turtles, press on the toucan to hear what he has to say, or get the monkey moving with the fun-to-manuever joystick. A simple touch will activate an engaging animal adventure! A great cause and effect experience. Size: 21"L x 8¾"W x 6"H. Requires 2 AA Batteries. Weight: 3¼ lbs.

Operation:

1. The Learn & Dance Zoo requires 2 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
2. The battery compartment is located on the bottom of the unit. To remove the battery compartment cover, unscrew the small Phillips Head screw, then slide the cover back and then off. Install new batteries, being careful to observe proper (+) & (-) battery polarity. Replace covers and screws. Turn the On/Off switch located on the bottom of the unit to On, and then select the singing or animal sounds switch on the top of the device.
3. Learn & Dance Zoo features two sets of four brightly colored buttons: one set on top of trees and another set of larger buttons placed low for easier access. The activity center introduces new animal friends through short, playful songs. Spin the roller to meet some turtles, press on the toucan to hear what he has to say, or get the monkey moving with the fun-to-manuever joystick. A simple touch on any of the plates will activate an engaging animal adventure!

Troubleshooting:

Problem: The Learn & Dance Zoo does not work.

Action #1: Check all batteries for proper (+) & (-) battery polarity.

Action #2: Replace the batteries with fresh new batteries. Never mix different brands or old and new batteries.

Care of Unit:

The Learn & Dance Zoo can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

When finished playing with the Learn & Dance Zoo turn the ON/OFF switch to OFF to help prevent battery drain. For prolonged storage we recommend removing the AA batteries.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.