
Skin Massager #3123

USER'S GUIDE



For Technical Support:

Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-832-8697
customer_support@enablingdevices.com



50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Soft brush with adjustable vibration!

A wonderful massager with a soft brush, adjustable vibration, and a tactile shaped handle for easy gripping. Just use the included screwdriver to adjust the amount of vibration to help desensitize the user. Size: 4½"L x 3"W x 2"D. Requires 1 AA Battery. Weight: ¼ lb.

Please Note: This product is not returnable due to sanitary reasons noted by OSHA standards.

Operation:

1. The Skin Massager requires 1 AA Battery to operate. Turn the unit over and remove the Velcro attached brush to reveal the battery compartment. Observing polarity, install 1 AA size battery (Not included) into the holder. Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly.
2. Replace brush and press firmly to secure the brush in place. To turn the vibration ON depress the ON/OFF push button located on the brush side of the massager. Once you have turned the vibration on you can now adjust its intensity with the included screwdriver. Opposite the ON/OFF switch is a small recessed flathead screw, turning the screw clockwise increases the vibration counterclockwise decreases it.

Troubleshooting:

Problem: Skin Massager does not function correctly.

Action #1: Replace the battery paying close attention to proper battery polarity.

Action #2: Make sure that the vibration is turned up enough for it to be felt.

Care of Unit:

If you will not be using Skin Massager for an extended amount of time, we recommend removing the battery.

The Skin Massager can be wiped clean with any mild household multi-purpose, non-abrasive sanitizer and disinfectant.

Do not use abrasive cleaners, as they will scratch the surface of the unit.

Do not submerge the unit, as it will damage the electrical components.